

CALOR

now you can

Calor Mini-BBQ

**CALOR**

now you can

User Instructions

Calor Mini-BBQ

Technical & Servicing Information

Technical & Servicing Information

This appliance is designed for outdoor use only using propane gas and must be serviced by a competent person in accordance with the instructions included. Please read all accompanying documentation carefully.

Model No: Calor Mini BBQ004**Technical Data for 400g Cartridge usage:**

Overall Height: 265 mm approx.
Overall Width: 365 mm approx.
Heat input(ΣQn): 2.5kW
Injector Size: 0.75mm
Gas Category: Direct pressure propane
Gas Flow: 13p(37) 190g/h

Technical Data for 6kg / 11kg Cylinder usage:

Overall Height: 265 mm approx.
Overall Width: 365 mm approx.
Heat input(ΣQn): 2.5kW
Injector Size: 0.75mm
Gas Category: 13p(37)
Gas Flow: 178g/h

CE 0086**WARNINGS**

- Avoid twisting the flexible hose.
- This product is for **OUTDOOR USE ONLY**.
- NEVER use indoors, in an enclosed area or below ground level.
- This 'Calor Mini BBQ' shall only be used with the Calor 400g propane gas cartridge, the 6kg lightweight patio cylinder or the 11kg patio cylinder. It may be hazardous to attempt to fit any other types of gas cartridges/cylinders.
- Failure to read and follow these instructions could result in serious injury or damage to property.
- This product will become hot when in use – take care when touching.
- Keep children and pets at a safe distance from the unit when in use.
- DO NOT move this product when in use.
- Always turn off gas supply at the gas cylinder when not in use.
- Any modification of this 'Calor Mini BBQ' may

be dangerous.

- DO NOT leave this product unattended when in use.
- ALWAYS ensure the cylinder is vertical at all times.
- ONLY use the 'Calor Mini BBQ' on a flat LEVEL non-flammable surface or ground.
- AVOID using the 'Calor Mini BBQ' in violent winds.
- When positioning, ensure the unit is a minimum of 1 metre from flammable items or structure.
- This 'Calor Mini BBQ' is not intended for use with charcoal or other similar fuel.
- Always leak test the unit – annually, when dismantled, when parts are replaced, or if the gas cartridge/cylinder is removed or replaced.
- When storing the 'Calor Mini BBQ' or gas cartridge/cylinder, ensure that they are away from flammable materials or liquids.
- Always follow care and maintenance instructions – regularly maintain your 'Calor Mini BBQ'.
- DO NOT allow grease, fat or food residue to build up in or on the 'Calor Mini BBQ' – RISK OF FIRE.
- Always replace worn parts – do not use 'Calor Mini BBQ' if a leak, wear, or damage is found.
- Never overload the grill with food.
- DO NOT store or cover the 'Calor Mini BBQ' until fully cooled.
- CAUTION: accessible parts may become very hot. Keep young children away from the appliance.
- Please note the unit may flare during its warming up period. Warming up period may take approximately 20 minutes.
- Do not use an appliance which is leaking, damaged or which does not operate properly.
- Always inspect hose for cuts, cracks or excessive wear before use. If hose is damaged it must be replaced with a hose suitable for use with LPG and meet the national standards for country of use. Hose length should not be longer than 1.5 metres.
- Position the flexible hose to ensure it is not subjected to twisting.

Do Not Bring Goods Back To Place Of Purchase.

For help, contact the helpline. Helpline hours: 9am - 5pm Monday to Friday. Telephone: 00 353 1 287 3797.

CARE AND MAINTENANCE

- Regularly clean your 'Calor Mini BBQ' between uses and especially after extended periods of storage.
- Ensure the 'Calor Mini BBQ' and it's components are sufficiently cool before cleaning.
- Do not leave the 'Calor Mini BBQ' exposed to outside weather conditions or stored in damp, moist areas.
- Never douse the 'Calor Mini BBQ' with water when its surfaces are hot.
- Never handle hot parts with unprotected hands.
- Protect hands with heat resistant gloves.
- In order to extend the life and maintain the condition of your 'Calor Mini BBQ', we strongly recommend that the unit is covered when left outside for any length of time, especially during the winter months.
- IMPORTANT – We recommend that servicing of this appliance should be performed either after every 100 hours of use or annually, whichever is achieved soonest.

Cleaning The Grill

- Clean with hot soapy water.
- To remove any food residue, use a mild cream cleaner on a non-abrasive pad.
- Rinse well and dry thoroughly.

Burner Maintenance

- The grill plate can be cleaned in the dishwasher.
- In normal usage, burning off the residue after cooking will keep the burners clean.
- The burner should be removed and cleaned annually, or whenever a build-up of residue is found, to ensure that there are no signs of blockage (debris, insects) in either the burner portholes or the venturi tubes.

Barbecue Body

- Regularly remove excess grease or fat from the 'Calor Mini BBQ' body and grease tray with a soft plastic or wooden scraper.
- To clean fully, use hot soapy water and a cloth, or nylon-bristled brush only.
- Do not immerse the gas controls or manifold in water.

Storage

- Store your 'Calor Mini BBQ' in a cool dry place. There is also a handy storage area in the base for the 400g cartridge. (see image)
- Cover the burners with aluminium foil in order to prevent insects or other debris from collecting in burner holes.
- If the 'Calor Mini BBQ' is to be stored indoors, the gas cartridge/cylinder must be disconnected and left outside. The gas cartridge/cylinder should always be stored outside, in a dry, well-ventilated area, away from any sources of heat or ignition.
- Do not let children tamper with the bottle.

**GUARANTEE**

The 'Calor Mini BBQ' is made to an exacting quality standard and is covered by the following guarantee.

THIS PRODUCT IS FULLY GUARANTEED FOR 2 YEARS, REGARDING PROPER USE.

This guarantee does not affect your statutory rights.

HELPLINE
353 1 287 3797

IF YOU NEED ANY ASSISTANCE PLEASE DO NOT HESITATE TO CONTACT US DIRECTLY, DO NOT BRING GOODS BACK TO PLACE OF PURCHASE.

5 Easy Steps To Setting up your 'Calor Mini BBQ'

ASSEMBLY MUST BE CARRIED OUT BY A COMPETENT PERSON.

ALTHOUGH EVERY PRECAUTION HAS BEEN TAKEN TO ELIMINATE SHARP EDGES ALWAYS TAKE CARE WHEN HANDLING METAL COMPONENTS.

1


- Remove the base by releasing the catches on either side and lifting the BBQ away from the base.
- Position the grease tray beneath the BBQ sink



2

- 2 regulator and hose assemblies are packed with the BBQ.

This regulator and hose assembly is for use with the Calor 400 gram cartridge. This regulator and hose assembly is for use with the Calor Patio Gas cylinders.



- Connect the regulator and hose assembly to your gas cylinder, instructions to do this are provided in the separate regulator instruction leaflet.
- Keep the regulator in the off position at this point.

3

- If using the 400 gram cartridge position the cartridge in the cartridge location on the base as shown.
- Do not position the cartridge beside the BBQ



4

- Connect the hose to the BBQ by pushing the quick connect coupling onto the connector on the side of the Calor Mini BBQ.

Your Calor Mini BBQ is now ready for use. Follow the operation instructions provided in this leaflet.



User Instructions

Important please read these instructions for use carefully so as to familiarise yourself with the appliance before connecting it to its gas cartridge/cylinder. Keep these instructions for future reference.

- ONLY use plastic barbecue utensils as other materials will damage the non-stick cooking plate.
- Preparation before cooking – To prevent foods from sticking to the cooking grill, please use a brush to apply a light coat of cooking or vegetable oil before each barbecuing session.
- "Check that gas seals" are in place and in good condition before connecting to the gas cartridge/cylinder.

Lighting the 'Calor Mini BBQ'

- Ensure cartridge/cylinder is in the upright position.
- Turn on gas supply at the gas regulator valve.
- Push control dial in and turn to "M" position where ignition by spark should occur.
- Hold dial in for at least ten seconds to ensure the burner stays lit.
- If burner does not light after holding dial in for ten seconds, turn the dial to OFF position and wait for 1 minute and try again. Do not continuously hold the dial in as you may cause a build up of gas.
- In windy conditions shield from wind to ensure easy lighting.
- Turn control dial to alter burner settings as required.

End of Cooking Session

After each cooking session, turn the 'Calor Mini BBQ' burner to the 'high' position and

burn for 10 minutes. This procedure will burn off cooking residue, thus making cleaning easier.

Turning Off Your 'Calor Mini BBQ'

- First turn off at the regulator and then after extinction of the flame, turn off at the control knob.
- Disconnect from the gas cartridge/cylinder.

Siting Instructions

- This 'Calor Mini BBQ' is for OUTDOOR USE ONLY and should be placed in a well ventilated area.
- Take care to ensure that it is not placed UNDER any combustible surface.
- The sides of the 'Calor Mini BBQ' should NEVER be closer than 1 metre from any combustible surface. Keep this 'Calor Mini BBQ' away from any flammable materials.
- Important – Do not obstruct any ventilation openings in the 'Calor Mini BBQ' body.
- Should you need to change the gas cartridge/cylinder, confirm that the 'Calor Mini BBQ' is switched off.
- The gas bottle shall be changed outside away from people, and away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.

If there is a leak on your appliance (smell of gas), first turn off the gas supply and take the appliance into a flame free location where the leak may be detected and stopped. Do not try to detect leaks using a flame.

Use soapy water.

The Calor Mini BBQ must be placed on a horizontal surface.

Leak Testing

- If you suspect a gas leakage check all joints by using a brush and soapy water.
- If bubbles form over a joint there is a leak.
- Turn off the gas.
- Ensure that all gas joints are tightly fitted.
- Repeat test. If bubbles form do not use the 'Calor Mini BBQ' and contact the helpline.
- Leak test annually and whenever the gas cartridge/cylinder is removed or replaced.
- This barbecue is used with a 6kg/11kg Calor Propane cylinder or a small 400g cartridge. Use Propane LPG bottled gas only.
- Gas cylinders should never be laid on their side. Cartridges without valves may be stored on their side.
- Gas cylinders must always be stored outdoors, above ground and in a well ventilated location.

CAUTION

- Regularly clean your barbecue after every use.
- If you smell gas – turn off the barbecue, extinguish all flames. If the odour continues, immediately contact your gas supplier.
- In the event of an uncontrollable fire, immediately turn off the gas supply, disconnect gas valve from gas cartridge/cylinder moving it away from fire and contact the fire services. DO NOT PUT YOURSELF AT RISK!
- Ensure aerosols are not used near this unit when in use.
- Ensure all packaging and plastic bags are disposed of safely.
- Refer to instructions supplied with regulators to connect and disconnect from gas cylinders/cartridge.
- Change the gas cartridge/cylinder outside and away from people. Check that the

burner is extinguished before disconnecting the gas cartridge/cylinder.

- It may be hazardous to attempt to fit other type gas cartridges/cylinders.

Warning

Do not use the appliance if it has damaged or worn seals. Do not use an appliance which is leaking, damaged or which does not operate properly. It may be hazardous to attempt to fit other types of gas connectors. Any parts sealed by the manufacturer must not be altered.

Do Not Bring Goods Back To Place Of Purchase.

For help, contact the helpline. Helpline hours: 9am - 5pm Monday to Friday.
Telephone: 00 353 1 287 3797

Universal Innovations



Kilcoole Industrial Estate,
Kilcoole,
Co. Wicklow.
Ph: 00 353 1 2873797,
Fax: 00 353 1 2873798
Email: info@uig.biz
www.uig.biz