



Re-aligning Thermocouple

Step 1

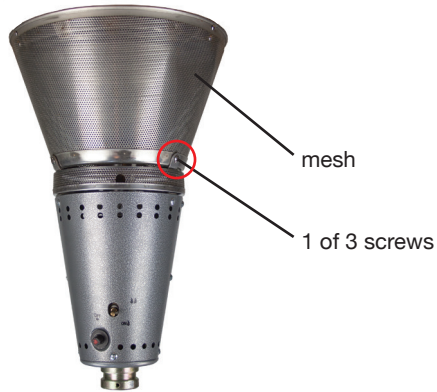

Remove the 3 screws on the outside of the lantern mesh and remove mesh from lantern.

Step 2

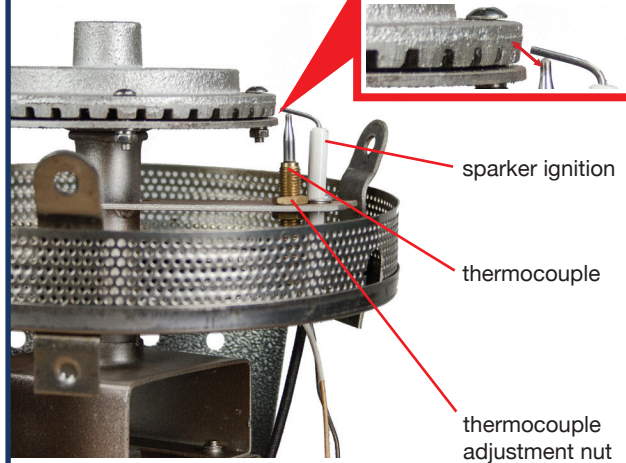

Undo the thermocouple adjustment nut and lower the thermocouple as shown above. Tighten the adjustment nut. Replace the lantern mesh and secure with screws.